




ART.991


SCHEMA DI COLLEGAMENTO
EINBAUANLEITUNG

INSTALLATION INSTRUCTION
SCHEMA DE BRANCHEMENT

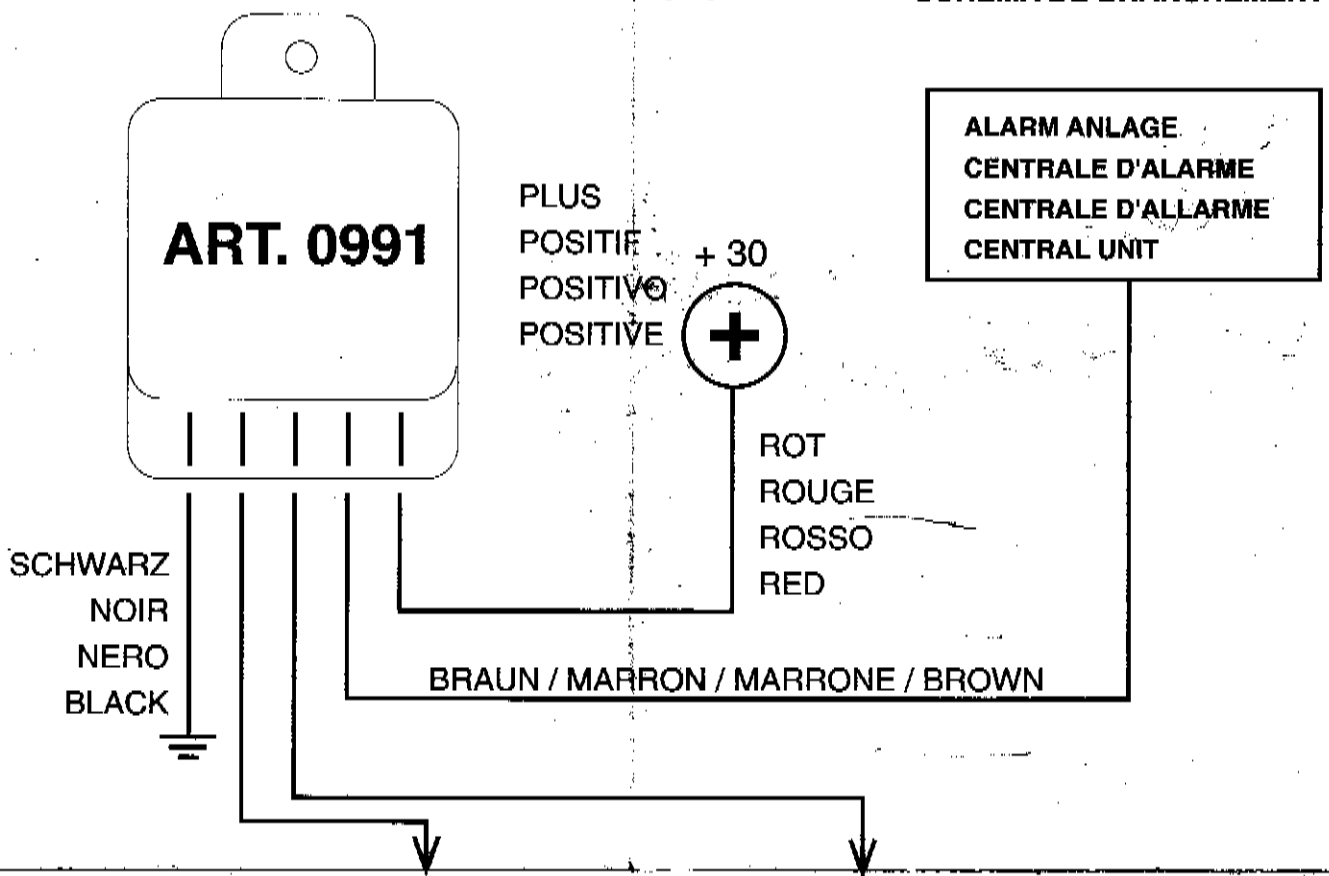


1°

ZUSÄTZLICHER SCHLIEßMOTOR
COMMANDE MOTEUR SUPPL.
SCHEMA MOTORE SUPPL.
SUPPL. DOOR MOTOR DIAGRAM

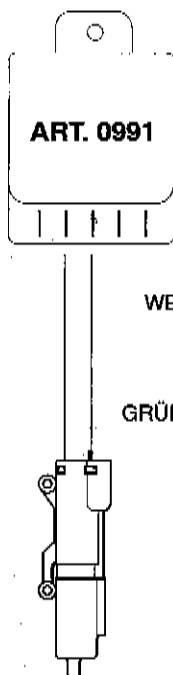

2°

PLUS GESTEUERT
COMMANDE POSITIF
COMANDO POSITIVO
POSITIVE POLARITY SOURCE

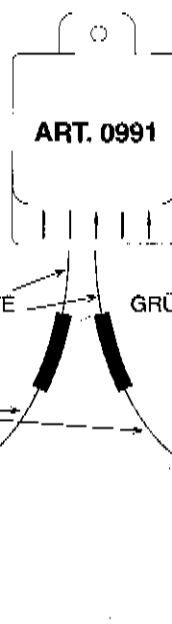

3°

NEGATIV GESTEUERT
COMMANDE NEGATIF
COMANDO NEGATIVO
NEGATIVE POLARITY SOURCE

